




COOKTOP PARTS

For Models: RF114PXSQ0, RF114PXSB0, RF114PXST0
(Designer White) (Black) (Designer Biscuit)

30" ELECTRIC FREESTANDING
STANDARD CLEAN RANGE

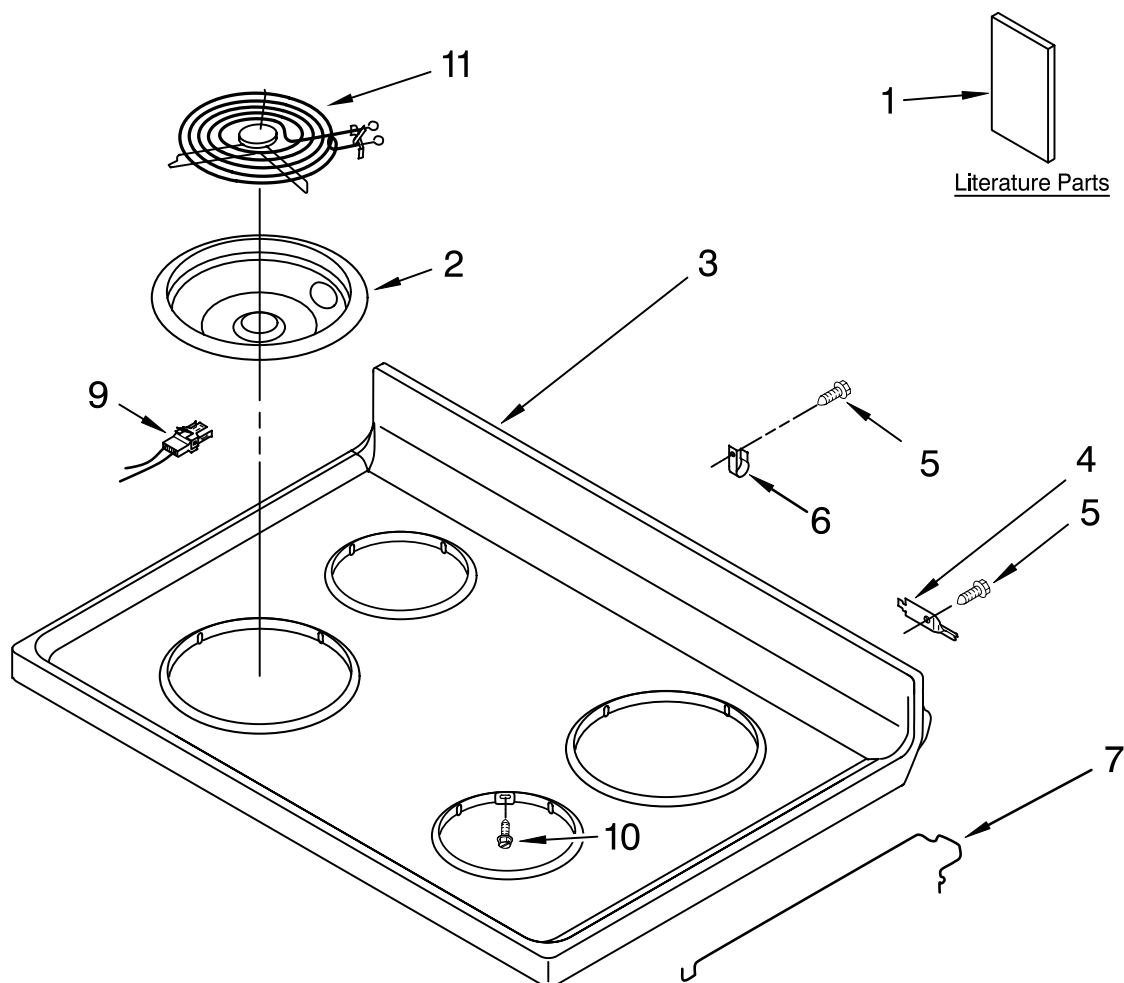

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	9763001	Owners Manual
	9762975	Tech Sheet
	9762996	Instructions, Installation
		Template, Anti-Tip
	9757142	English/Spanish
	9757143	English/French
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2		Bowl, Drip
	3195208	6" Chrome (2)
	3195209	8" Chrome (2)
3		Cooktop
	3186231	White
	8272527	Biscuit
	3186233	Black
4	3195060	Hinge, Cooktop (2)

Illus. No.	Part No.	DESCRIPTION
5	3196178	Screw
6	308605	Strain Relief
7	3195812	Rod, Support (2)
9	814399	Receptacle, Elmnt
10	3196154	Screw
11		Element, Surface
	9761347	6" (2)
	9761345	8" (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF114PXSQ0, RF114PXSB0, RF114PXST0
(Designer White) (Black) (Designer Biscuit)

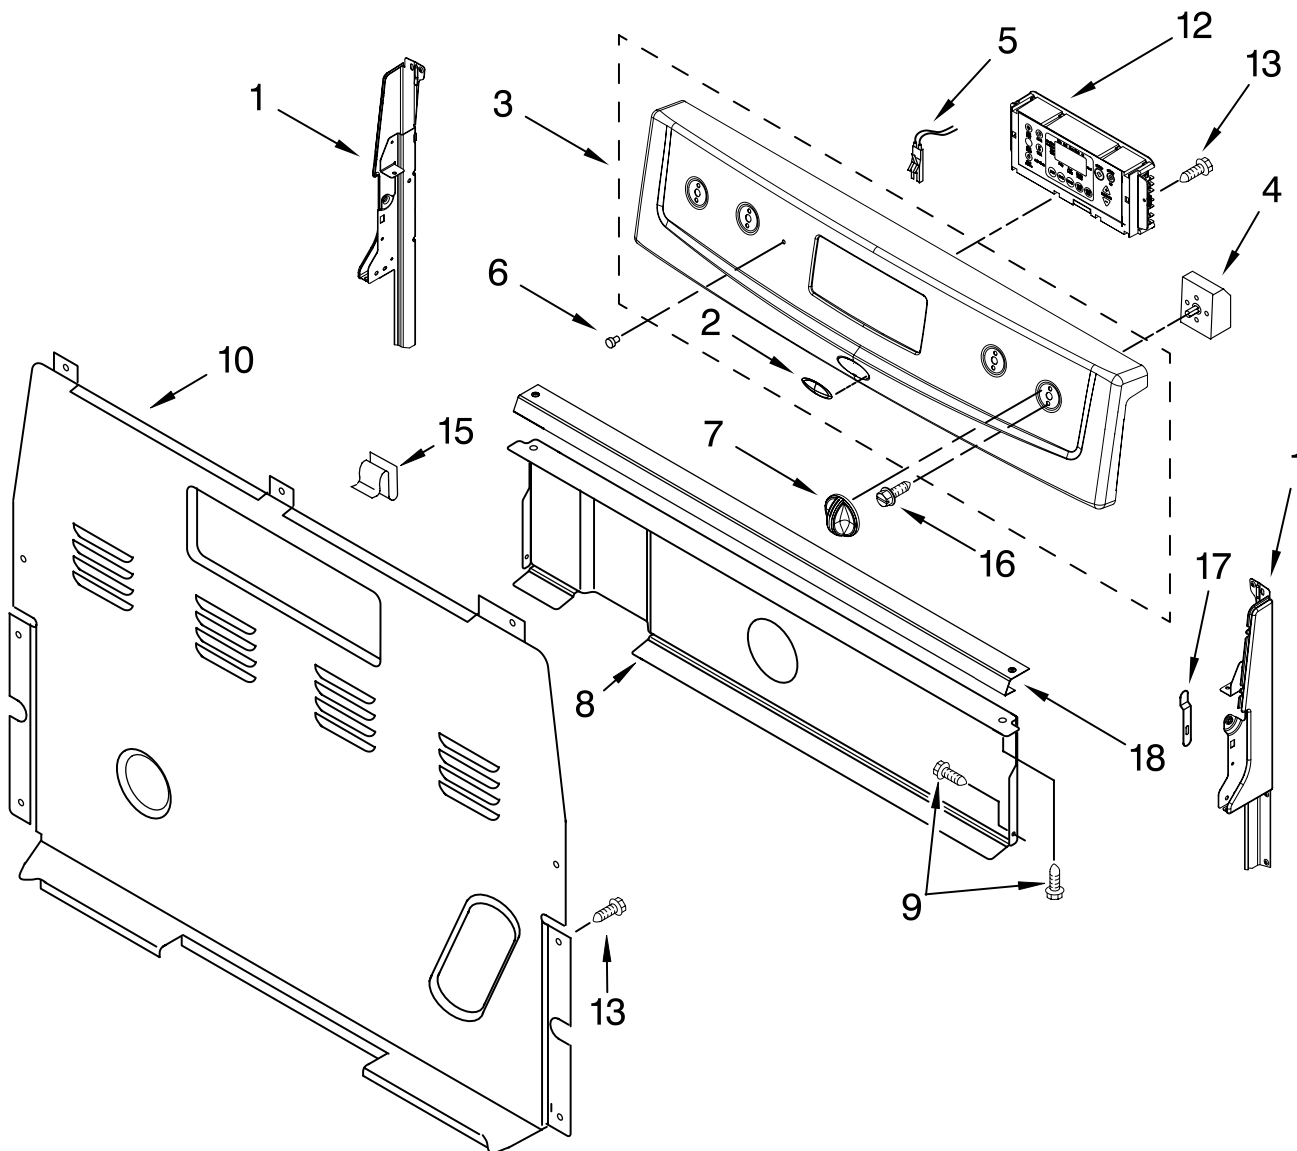

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009080	Black Left Hand
	W10009090	Black Right Hand
	W10009040	White Left Hand
	W10009050	White Right Hand
	W10009060	Biscuit Left Hand
	W10009070	Biscuit Right Hand
2	9757609	Nameplate
3		Panel, Backguard
	9762017	Black
	9762015	White
	9762016	Biscuit


Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	3148954	Left Front
	3148952	Left Rear
	3148954	Right Rear
	3148952	Right Front
	3400882	Screw (8)
5	8523265	Light, Indicator
6	3196068	Lens, Light
7		Knob, Infinite (4)
	9761964	Black
	9761962	White
	9761963	Biscuit

Illus. No.	Part No.	DESCRIPTION
8	8053912	Shield, Heat
9	3196166	Screw
10	8272473	Cover, Upper
12		Control, Range
	9762209	Black
	9762208	White
	9762210	Biscuit
13	3196178	Screw
15	8273564	Clip
16	3400882	Screw
17	3196200	Clip, Spring (2)
18	9762095	Brkt-Mntg, Console

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF114PXSQ0, RF114PXS0, RF114PXST0
(Designer White) (Black) (Designer Biscuit)

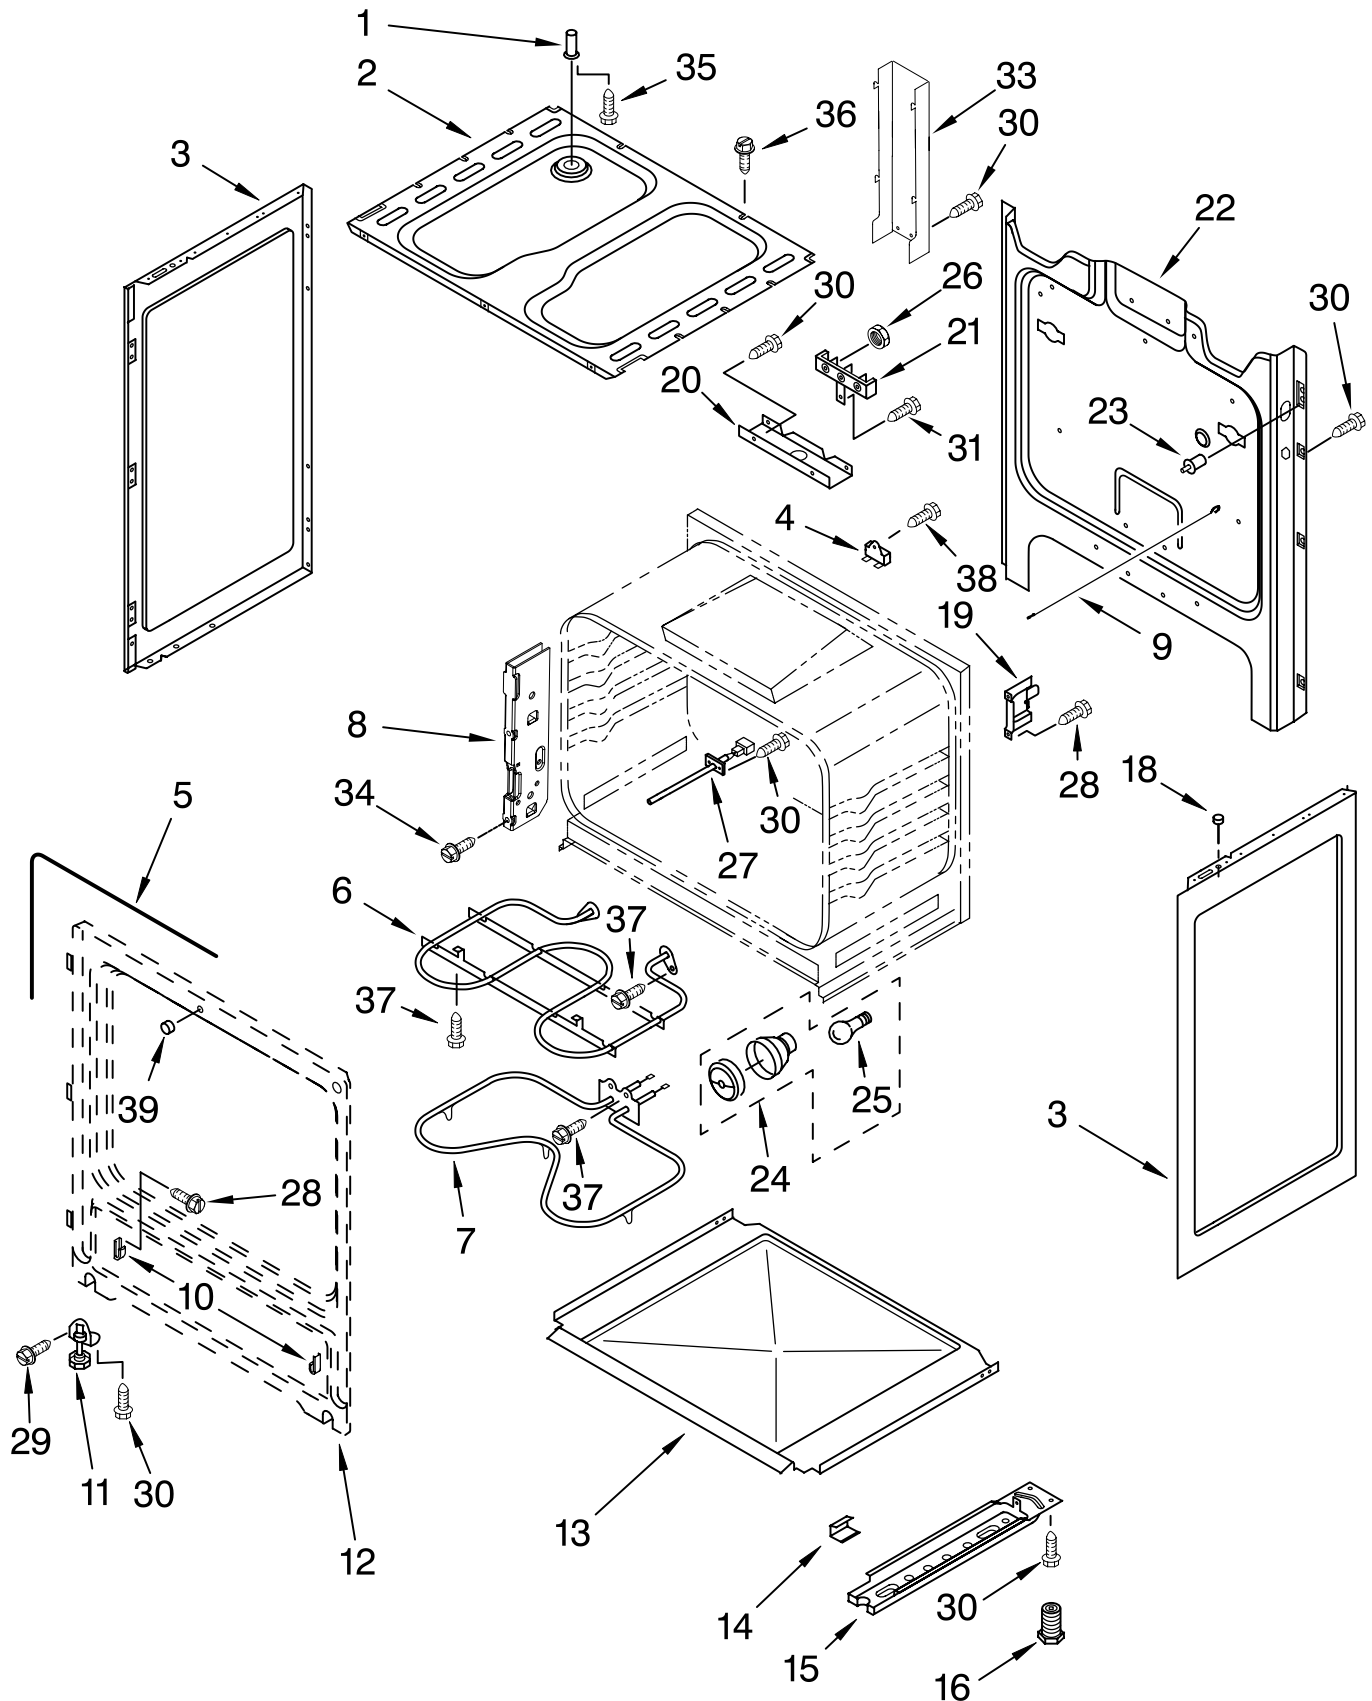

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF114PXSQ0, RF114PXSB0, RF114PXST0
(Designer White) (Black) (Designer Biscuit)


Illus. No.	Part No.	DESCRIPTION
1	3169143	Vent Tube
2	3186144	Box, Burner
3		Panel, Side (2)
	8053830	White-Textured
	8272519	Biscuit-Textured
	8053832	Black-Textured
4	3196548	Fuse, Thermal
5	3186152	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	9760407	Brkt-Mounting
9	9757239	Rod, Door Switch
10	9759785	Glide, Drawer Frnt
11	3196037	Foot, Front (2)
12		Frame, Front (Non-Serviceable)
13	8054068	Tray, Insulation
14	3196576	Clip, Panel (6)
15	9760314	Rail, Base (2)
16	9761935	Foot, Rear (2)
18	3195809	Bumper, Side (2)
19	3186116	Support, Oven (2)
20	3186034	Bracket, Service
21	9761958	Block, Terminal
22	8274034	Back, Main
23	9757262	Switch, Door
24	3196701	Light Socket Assy
25	311255	Bulb, Oven Light
26	112432	Nut (3)
27	8273902	Sensor, Oven
28	3196169	Screw
29	3196179	Screw
30	3196178	Screw
31	3400016	Screw
33	9758283	Cover, Box
34	W10031780	Screw
35	3196567	Screw
36	3196168	Screw
37	3196174	Screw
38	3196172	Screw
39	9758701	Spacer, Door

INSULATION

8273263 Insulation, Wrap
8272611 Insulation, Back

DRAWER & BROILER PARTS

For Models: RF114PXSQ0, RF114PXSB0, RF114PXST0
(Designer White) (Black) (Designer Biscuit)

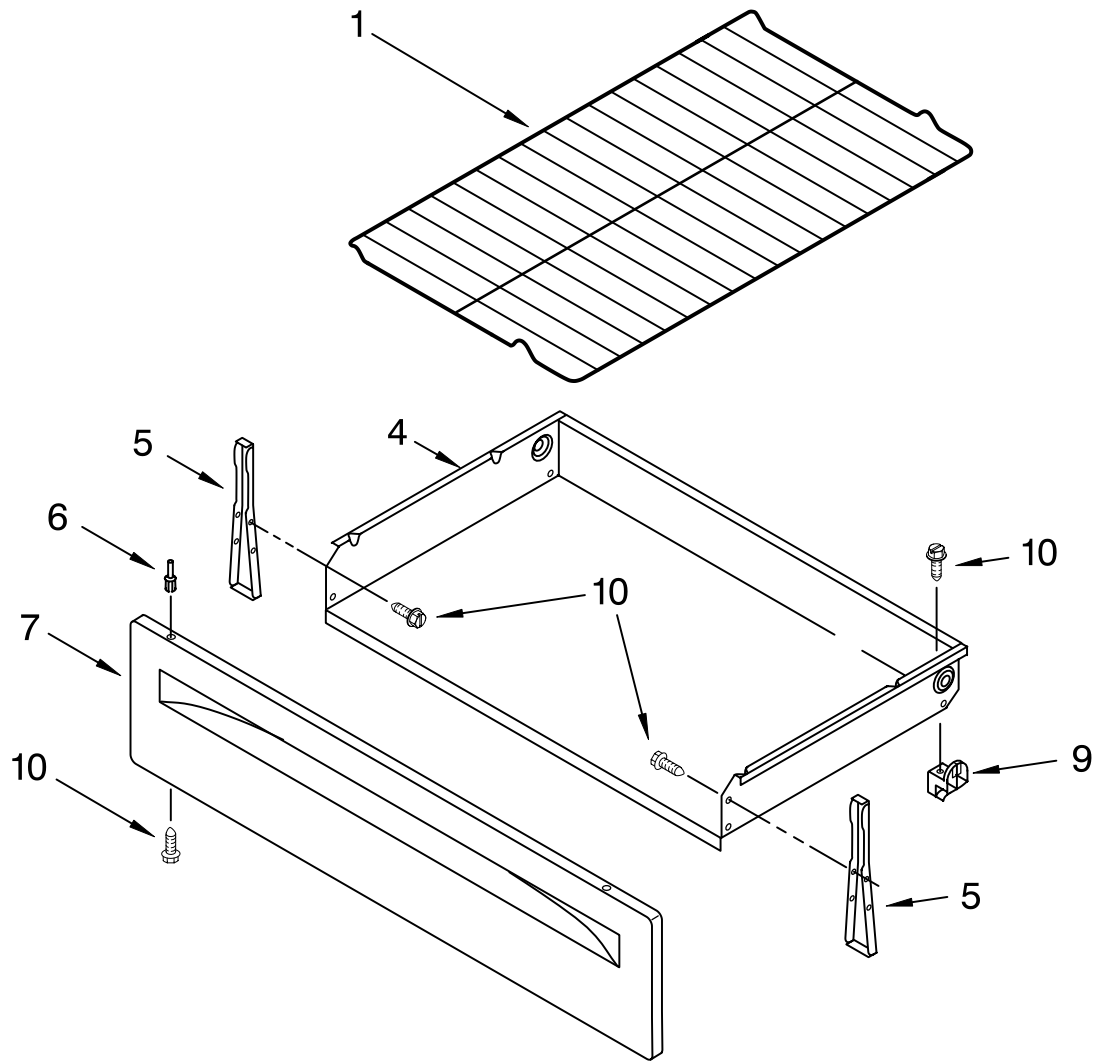


Illus. No.	Part No.	DESCRIPTION
1	3195710	Rack, Oven (2)
4	9761030	Drawer, Storage
5	9758200	Bracket, Drawer(2)
6		Rivet, Push (2)
	3196814	White
	3196815	Almond
	3196813	Black
7		Panel, Drawer Frnt
	8053339	White
	8272501	Biscuit
	8053341	Black
9	8053334	Glide, Drawer (2)
10	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF114PXSQ0, RF114PXS0, RF114PXST0
(Designer White) (Black) (Designer Biscuit)

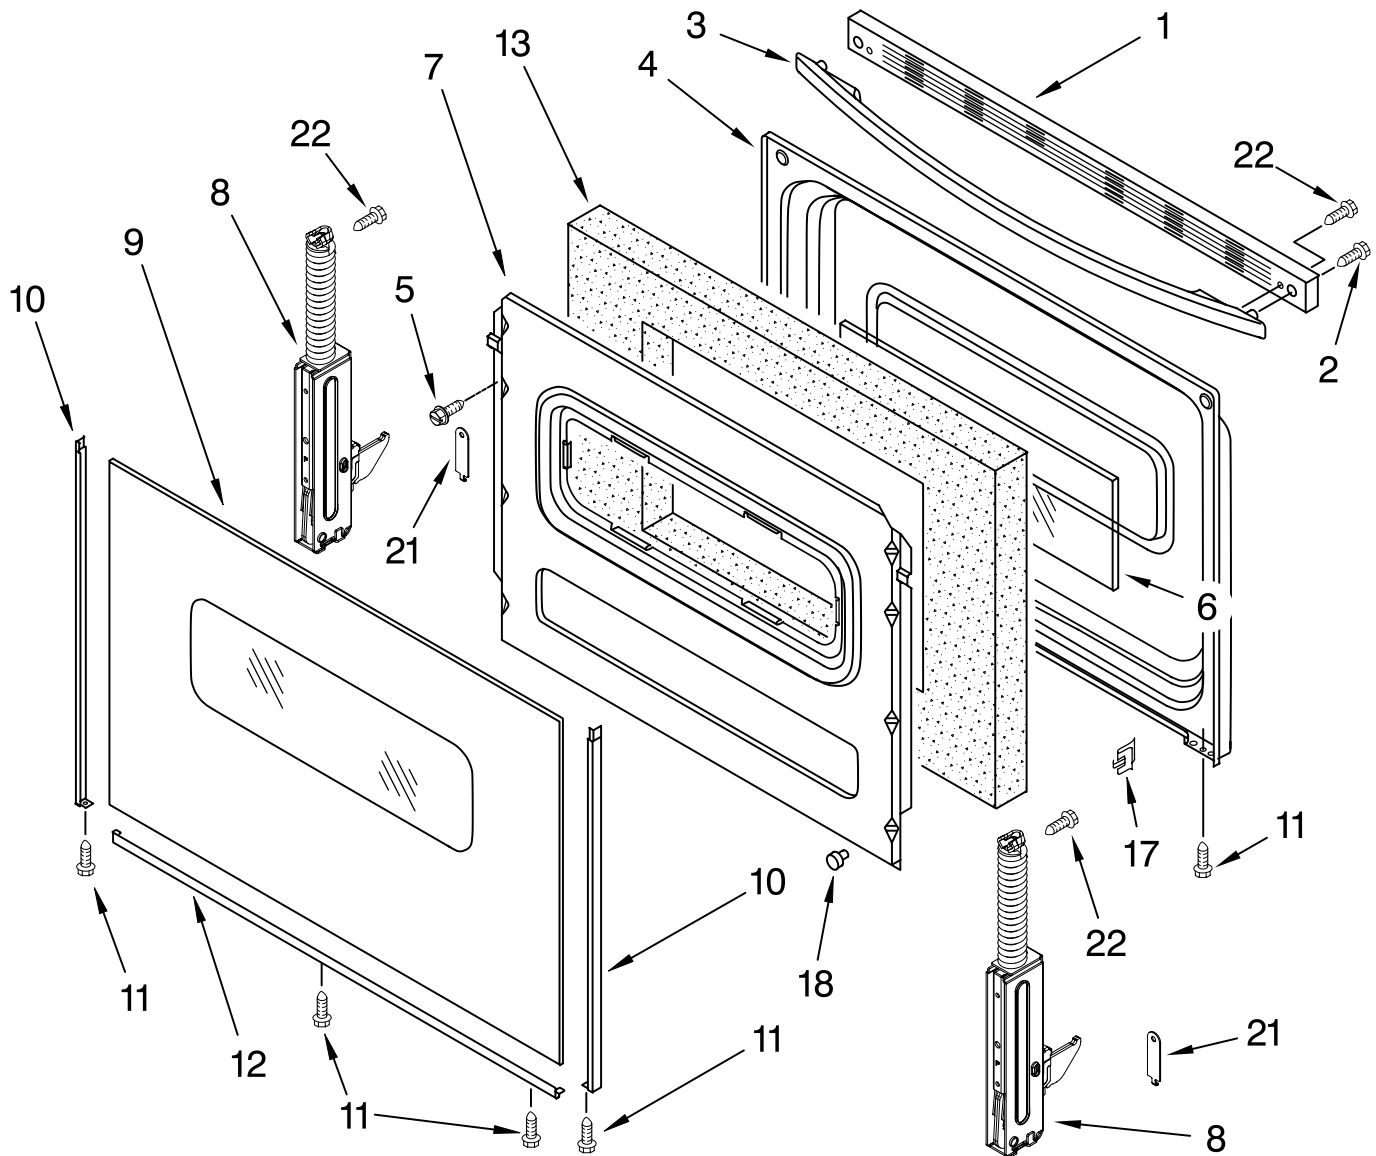

Illus. No.	Part No.	DESCRIPTION
1	9762391	Trim, Top Black
	9761975	White
	9761976	Biscuit
2	3196164	Screw
3		Handle, Door
	9761983	Black
	9761982	White
	9761984	Biscuit
4	9761340	Liner, Door
5	W10031790	Screw
6	9758163	Window, Inner

Illus. No.	Part No.	DESCRIPTION
7	9761500	Retainer, Insul.
8	9761494	Hinge, Door (2)
9		Glass, Outer
	9762477	Black
	9762476	White
	9762478	Biscuit
10		Trim, Side
	8523171	Black Left Hand
	8523165	Black Right Hand
	8523172	White Left Hand
	8523166	White Right Hand
	8523173	Biscuit Left Hand
	8523167	Biscuit Right Hand

Illus. No.	Part No.	DESCRIPTION
11	3196160	Screw
12		Trim, Lower
	8523177	Black
	8523175	White
	8523178	Biscuit
13	8272618	Insulation
17	3196025	Clip, Glass (6)
18	3195809	Bumper, Door (2)
21	9761517	Clip, Dr Mntg (2)
22	3196165	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

For Models: RF114PXSQ0, RF114PXSB0, RF114PXST0

(Designer White) (Black) (Designer Biscuit)

Illus. No.	Part No.	DESCRIPTION
Parts Not Illustrated and Optional Parts (Not Included)		

SPLICING WIRES--25FT.

LENGTH

242828	Wire, Black
	12 Ga. 150° c
242821	Wire, Blue
	14 Ga. 150° c
242822	Wire, Brown
	14 Ga. 150° c
242830	Wire, Brown
	14 Ga. 200° c
242823	Wire, Green
	14 Ga. 150° c
242824	Wire, Orange
	14 Ga. 150° c
242825	Wire, Red
	14 Ga. 150° c
242831	Wire, Red
	14 Ga. 200° c
242827	Wire, Yellow
	14 Ga. 150° c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

Illus. No.	Part No.	DESCRIPTION
<u>INSULATION</u>		
	261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

	72017	White
	72107	Almond
	4392899	Biscuit
	511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

	350930	White
	350956	Almond
	4392901	Biscuit
	285006	Superior Black
	206922	Primer (White)

PAINT, BULK (1 qt.)

	799344	White (Uncut)
	978883	Almond (Uncut)
	4392900	Biscuit (Uncut)

Illus. No.	Part No.	DESCRIPTION
<u>ACCESSORY PARTS</u>		
	241430	Foil, Aluminum Oven (18" x 25')
	3184478	Cleaner, Glass

ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

WIRING HARNESS PARTS

9761476	Harness, Wire (Cooktop)
9762950	Harness, Wire (Main)
311227	Wire, Ground
3196154	Screw
9762430	Harness, Wire (Sensor/Dr Switch)
3196696	Clip, Harness
3196174	Screw (Grnd / Main Back)
313660	Clip, Wire Ground
3196173	Screw

Miscellaneous

3196897	Pin Kit-Dr Removal
---------	--------------------

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST